




netis Wireless N Router **Quick Installation Guide**

Model No. **WF2411PS**

1.Package Contents

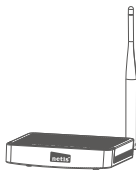

WF2411PS




Power Adapter



QIG


2.Hardware Connection

Situation One, To work with an Outdoor CPE/Receiver

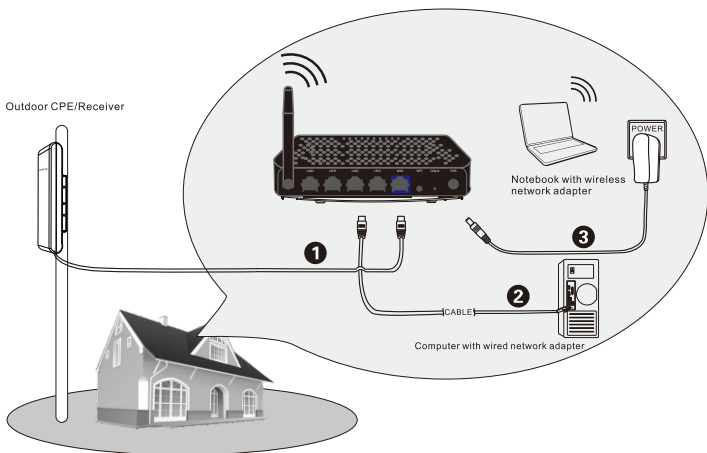

- 2.1. Connect the Ethernet cable from the existing Outdoor CPE/Receiver to the netis Router's **WAN** port.
- 2.2. Connect your computer to one of the **LAN** ports on netis Router with an Ethernet cable.
- 2.3. Plug the provided Power Adapter into the **PWR** jack of netis Router and the other end to a standard electrical socket. Then wait for one minute.

Situation Two, To work with a normal xDSL/Cable Modem

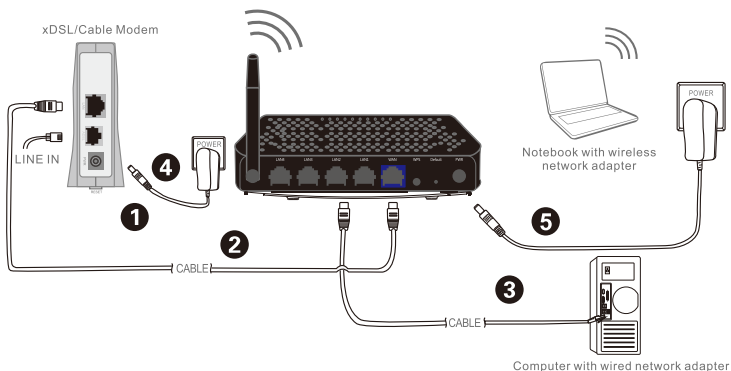

2.1. Power off your Modem.

2.2. Connect the **WAN** port on netis Router to the Modem's **LAN** port with an Ethernet cable.

2.3. Connect your computer to one of the **LAN** ports on netisRouter with an Ethernet cable.

2.4. Power on your Modem.

2.5. Plug the provided Power Adapter into the **PWR** jack of netis Router and the other end to a standard electrical socket. Then wait for one minute.

3.Configure the Router via Web Management Page

3.1. Set the IP address of the wired network adapter on your computer as **“Automatic”** or **“DHCP”**.

For Windows 8/ 7/Vista

- 1) Go to **“Settings”** (Win 8)/ **“Start”** (Win 7/Vista)> **“Control Panel”**.
- 2) Left-click on **“Network and Internet”**> **“Network and Sharing Center”**> **“Change adapter settings”** (Win 8/7)/ **“Manage network connections”** (Win Vista).
- 3) Right-click on **“Local Area Connection”** and left-click on **“Properties”**.
- 4) Double-click on **“Internet Protocol Version 4 (TCP/IPv4)”**.
- 5) Select **“Obtain an IP address automatically”** and **“Obtain DNS server address automatically”** then left-click on **“OK”**.

For Windows XP/2000

- 1) Go to **“Start”**> **“Control Panel”**.
- 2) Left-click on **“Network and Internet Connections”**> **“Network Connections”**.
- 3) Right-click on **“Local Area Connection”** and left-click on **“Properties”**.
- 4) Double-click on **“Internet Protocol (TCP/IP)”**.
- 5) Select **“Obtain an IP address automatically”** and **“Obtain DNS server address automatically”** then left-click on **“OK”**.

For MAC OS

- 1) Click on the **“Apple”** menu> **“System Preferences”**.
- 2) Click on the **“Network”** icon.
- 3) Click on **“Ethernet”** in the left side box and click on **“Advanced”** in the lower right corner.
- 4) In the top options, select **“TCP/IP”**.
- 5) In the pull-down menu next to **“Configure IPv4”**, select **“Using DHCP”**.
- 6) Click **“OK”** then **“Apply”**.

3.2. Open your browser and type **192.168.1.1** in the address field to visit router's web management page.



3.3. Select the language as you need on the top box, default is in English.

1) In **"Quick Setup"** page, select your **Internet Connection Type**.

If **"DHCP"** is selected, the router will automatically receive the IP parameters from your ISP (Internet Service Provider).

If **"Static IP"** is selected, please enter the **IP Address/Subnet Mask/Default Gateway/DNS Servers** given by your ISP.

If **"PPPoE"** is selected, please enter the **Username** and **Password** given by your ISP.

2) Under **Wireless Setup**, configure your wireless network name (SSID) and password.

3) Left-click on **"Save"** to make your settings take effect.

The screenshot shows the netis Quick Setup page. At the top, there is a 'Select Language' dropdown and an 'Advanced' button with a gear icon. The main heading is 'Quick Setup'. Under 'Internet Connection Type', there is a cloud icon labeled 'internet' and four radio buttons: DHCP (selected), Static IP, PPPoE, and Other. Below this, under 'Wireless Setup', there is a green circle icon labeled 'Wireless' and a table with three rows: SSID (value: netis), Security (radio buttons for Disable and Enable, with Enable selected), and Password (value: password, with a note '(Please enter 8-63 characters.)'). At the bottom right is a 'Save' button.

Tip:

Default IP address: 192.168.1.1

Default SSID: netis

Default wireless password: password


Tip:

You can click on  **Advanced** button on the top for other Internet connection types and further settings.

4. Troubleshooting


Q How do I restore my netis Router's configuration to its default settings?

A With the router powered on, use a pin to press and hold the **Default** button on the rear panel for 8 to 10 seconds before releasing it. The router will reboot and all configurations are back to factory default.

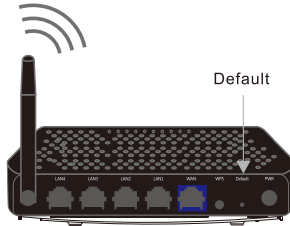

Q What can I do if my Internet cannot be accessed?

A

- 1) Check to verify the hardware connections are correct. Please refer to the **“Hardware Connection”** step.
- 2) Login to netis Router's web management page and ensure that you set the correct Internet Connection Type.
For cable modem users, please configure **“MAC Clone”** additionally. On the left-side menu, left-click on  **Advanced** **“Network”** > **“MAC Clone”**.
And left-click on **“Clone MAC address”** and then **“Save”** it.

MAC Address : 08:10:76:3a:70:fb

MAC Clone

Default MAC

- 3) Reboot the modem first and then netis Router. Wait for one minute before you check the Internet again.
- 4) If Internet access is not available, please connect your computer directly to your modem and try the Internet again.
If the Internet is still not working, please contact your ISP for further help.

Technical Support: support@netis-systems.com

PKUM05592

NETIS SYSTEMS CO., LTD.
www.netis-systems.com
MADE IN CHINA