




netis Wired PCI/PCI-E Adapter Quick Installation Guide

Model NO. AD1101
AD1102
AD1103

1.Package Contents

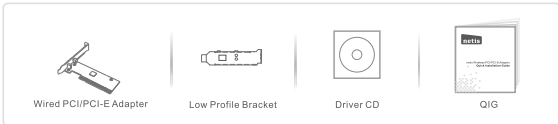


*The product model shown in this QIG is AD1101, as an example.

2.Hardware Connection


- 2.1. Turn off your computer and open the case.
- 2.2. Plug the wired PCI (/PCI-E) adapter into an available PCI (/PCI-E) slot.
- 2.3. Close the case and turn on your computer.

Tip: If your computer is with a small case that the fixed full height profile bracket doesn't match, please use the attached low profile bracket instead.

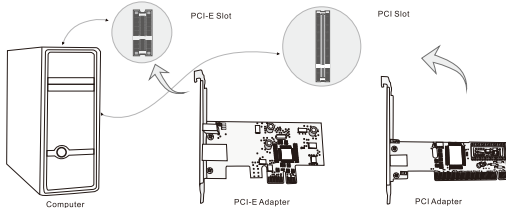

3.Driver Installation

- 3.1. Insert the netis Driver CD into your CD-ROM drive.

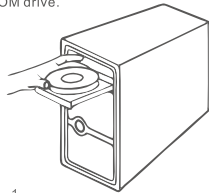

- 3.2. Install the provided driver from the CD.

For Windows Operating Systems

The **Setup Wizard** on the CD will guide you through the driver installation procedures.



Click "**Install Driver**" and choose your product model then click "**Install**". The **InstallShield Wizard** window will appear, then please click "**Next**" and follow the step by step procedures to finish the driver installation.

For MAC OS

Click on "**CD Browser**" and open the folder "**Driver**"> "**MAC**" from the CD. Select the driver package according to your product model and MAC OS version then run the **Installer.pkg** file. Then an installation dialog will pop up. Please click "**Continue**" and follow the step by step procedures to finish the driver installation.

For Linux

You may also get the available driver files from the "**Driver**" > "**Linux**" folder in the CD. **Tip:** For further steps, please visit netis website at www.netis-systems.com.

4.Connect to the Wired Network

After driver installation, you can connect the adapter to your network device such as router or switch by an Ethernet cable. The Link LED should light up to indicate a proper physical connection between the adapter and your network device.

5.Configure the Network Parameters

Set the IP address of your adapter as "**Automatic**" or "**DHCP**". Then, your computer could get the network parameters from the DHCP sever in your network.

For Windows 8/7/Vista

- 1) Go to "**Settings**" (Win 8)/"**Start**" (Win 7/Vista)> "**Control Panel**".
- 2) Left-click on "**Network and Internet**"> "**Network and Sharing Center**"> "**Change adapter settings**" (Win 8/7)/"**Manage network connections**" (Win Vista).
- 3) Right-click on "**Local Area Connection**" and left-click on "**Properties**".
- 4) Double-click on "**Internet Protocol Version 4 (TCP/IPv4)**".
- 5) Select "**Obtain an IP address automatically**" and "**Obtain DNS server address automatically**" then left-click on "**OK**".

For Windows XP/2000

- 1) Go to "**Start**"> "**Control Panel**".
- 2) Left-click on "**Network and Internet Connections**"> "**Network Connections**".
- 3) Right-click on "**Local Area Connection**" and left-click on "**Properties**".
- 4) Double-click on "**Internet Protocol (TCP/IP)**".
- 5) Select "**Obtain an IP address automatically**" and "**Obtain DNS server address automatically**" then left-click on "**OK**".

For MAC OS

- 1) Click on the "**Apple**" menu> "**System Preferences**".
- 2) Click on the "**Network**" icon.
- 3) Click on "**Ethernet**" in the left side box and click on "**Advanced**" in the lower right corner.
- 4) In the top options, select "**TCP/IP**".
- 5) In the pull-down menu next to "**Configure IPv4**" select "**Using DHCP**".
- 6) Click "**OK**" then "**Apply**".

For Linux

You may get the available configuration help from the Internet and netis website at www.netis-systems.com.

Technical Support:
USA/Canada:
Toll Free: +1 866 71 network(+1866 716 3896)
E-mail: usa_support@netis-systems.com
Other Regions:
E-mail: support@netis-systems.com

Appendix: FCC Statement

This device complies with Part 15& 68 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.